

logiflex

USER GUIDE

E2 Lock

OVERVIEW



FEATURES

- Tactile buttons and indicators sound for a premium experience;
- Automatic alarm after 4 attempts;
- 4 digit combination for 10,000 possibilities;
- For shared use (public);
- Low consumption of battery (more than 5,000 uses);
- Easy button cell battery change.

ITEMS

- Lock (included);
- Master key (not included);
- CR2032 battery (not included).

OVERVIEW



[See the instruction videos of the E2 lock](#)


E2 lock

1. Battery case
2. Master key port
3. Serial number
4. Touch screen
5. Lock button

Master key



BATTERY CHANGE

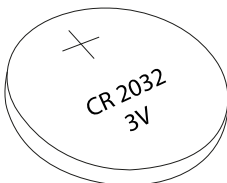


Battery change

- If the lock produces 3 beeps after unlocking, the battery needs to be replaced.
- Pull the battery case up and replace the battery. Use a button cell CR2032 (not included).

* The sound of the 3 beeps indicates that the battery will stay active for approximately 200 more uses.



USER GUIDE

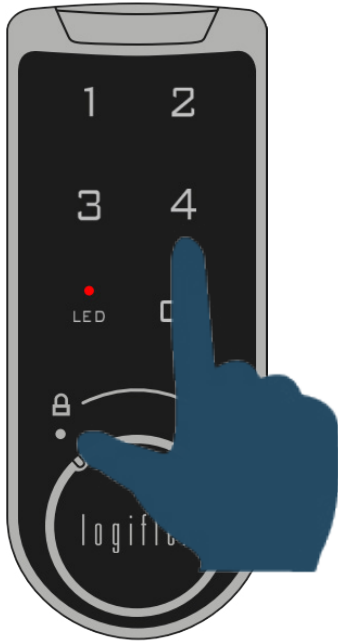

Program a code

Lock

- Enter a 4-digit code and turn lock button to lock.
- Memorize this code.
- This code will be valid for one use only.

Unlock

- Enter this 4 digit code again and turn lock button to unlock.
Do NOT press OK.

* If a mistake is made while entering the code, press OK to cancel and enter the code from the beginning.

* If the code is entered incorrectly 4 times in a row, a 20 second continuous alarm will sound. Enter the correct code to silence the alarm.

Forgotten code

- Note the serial number located on the side of the lock.
- Contact Logiflex to obtain the master code for your lock.
- Enter the 8-digit master code and press OK.
- Turn the lock to open.

Forgotten code - with master key

- Contact the person in charge of the master key.
- Insert the key and press OK.
- Turn the lock to open.